

# Product Specifications Document

PRODUCT NAME

SEGA MOUSE

MODEL NUMBER

MK 1638-50

## Table of Contents

1. Limitations on Applicability	3
2. Destination Model	3
3. External Appearance	3
4. Characteristics Compatibility	4
5. Measurements	4
6. Applicable Conditions	5
7. Electrical Specifications	5
8. System Specifications	5
9. SET Contents	6
10. Alterations	6

## 1. Limitations on Applicability

This specifications document applies to the Sega Enterprises product listed below.

SEGA MOUSE

Europe (MK-1638-50)

## 2. Destination•Model

Assuming this product will be sold in Europe, this product is assigned the below model number.

Japan Specifications

MK 1638-50

## 3. External Appearance

#### 4. Characteristics•Compatibility

The SEGA MOUSE is intended for Europe.

When connecting the Sega Mouse to the Mega Drive, the Mouse Track Ball automatically switches back and forth between 2 functions and can be operated single-handedly.

In the case of the mouse-function, it is possible to use the Sega Mouse as a general personal computer mouse containing 2 buttons (L,R). By using the included mouse pad, operation is made easier.

In the case of the trackball function, besides the 2 buttons (L,R) used for the mouse, by pushing the ball, this can be used as the same function as the mouse's left button.

The Sega Mouse has a rounded futuristic design, its shape fitting well in one's hand.

Moreover, by connecting the Sega Mouse to control pad terminal 2, it allows players to play games which previously were not possible with the previous control pad.

Count: 130 CPI

Switch over: Automatic; when turning over the Sega Mouse, it automatically switches back and forth between mouse and trackball

Notice: When using the mouse, please use the mouse pad

Compatibility: Mega Drive, Mega Drive 2, Wonder Mega, Tera Drive

#### 5. Measurements

##### Δ Main Body

- Measurements 55 (W) x 93 (D) x 40 (H) mm
- Weight 150 g
- Cable Length 2.0 m, 3.8 mm diameter

### Δ Packaging

- Measurements      \_\_\_ (W) x \_\_\_ (D) x \_\_\_ (H) mm
- Weight              \_\_\_ g

### Δ Inner Carton (containing 12 sets)

- Measurements      \_\_\_ (W) x \_\_\_ (D) x \_\_\_ (H) mm
- Weight              \_\_\_ g
- Volume              \_\_\_ cubic meters

### Δ Master Carton (containing 36 sets; 3 inner cartons)

- Measurements      \_\_\_ (W) x \_\_\_ (D) x \_\_\_ (H) mm
- Weight              \_\_\_ kg
- Volume              \_\_\_ cubic meters

## 6. Applicable Conditions

Transportation	0° C - 40° C	10 % RH - 80 % RH (free of condensation)
Storage	-10° C - 60° C	5 % RH - 90 % RH

## 7. Electrical Specifications

Voltage	DC + 5 V
Power Consumption	50 mA (MAX) while running
Interface	4 bit Output (hand shake)
Count	130 CPI
Automatic Switch	Photo Sensor

## 8. System

L, R Switch	2 EA	Push-type, color: Red
Ball Switch	1 EA	Push-type (Switched on only when used as Track Ball)
Ball	1 EA	19 mm diameter, Mould Ball
Retainer	1 EA	Slide-type
Cable	1 EA	1.2 m, 3.8 mm diameter
Connector	1 EA	D-SUB 9 P

## 9. SET Contents

Mouse Unit	1 EA	Wrapped in plastic bag, cable tied together
Mouse Mat	1 EA	Necessary when using the mouse; Sega Logo printed on pad
Manual	1 EA	1 color
Warranty Card	1 EA	
Individual Box	1 EA	4 color, contains barcode
Inner Carton	1/12 EA	1 carton contains 12 units; 1 color
Master Carton	1/36 EA	Contains 3 inner cartons for a total of 36 units; 1 color

## 10. Alterations

Mouse/Microtrack Ball for the Mega Drive

SEGA MOUSE

Δ Bring out the best with the Sega Mouse!


The Sega Mouse is the answer to the call of users who want to play simulation games, role playing games, adventure and various other genres with easy operation. Sega Mouse is a "mouse;" moreover, it is also possible to use this device as what is currently a popular product, a microtrack ball. The Sega Mouse is equipped with a widely used function and its stylish design will satisfy a large number of people. If operation requires going to the limits, "Sega Mouse" is the answer. Since operation can be adjusted to particular genres, the player can fully enjoy game play.

Δ By means of the dual functions, "mouse" and "trackball," game play can be broadened.

The answer to changing back and forth between "mouse and trackball" is the Sega Mouse. Turning over the body of the Sega Mouse, automatically switches from "mouse" to "trackball" and vice versa.

Δ More and more software for which the Sega Mouse can be used enters the stage!

The Mega CD software titles, "Rise of the Dragon" and "Tenbu Mega CD Special," which are presently on sale, are adapted for the Sega Mouse. Moreover, many more software titles such as "Switch" with which the Sega Mouse can be used, will be released hereafter.

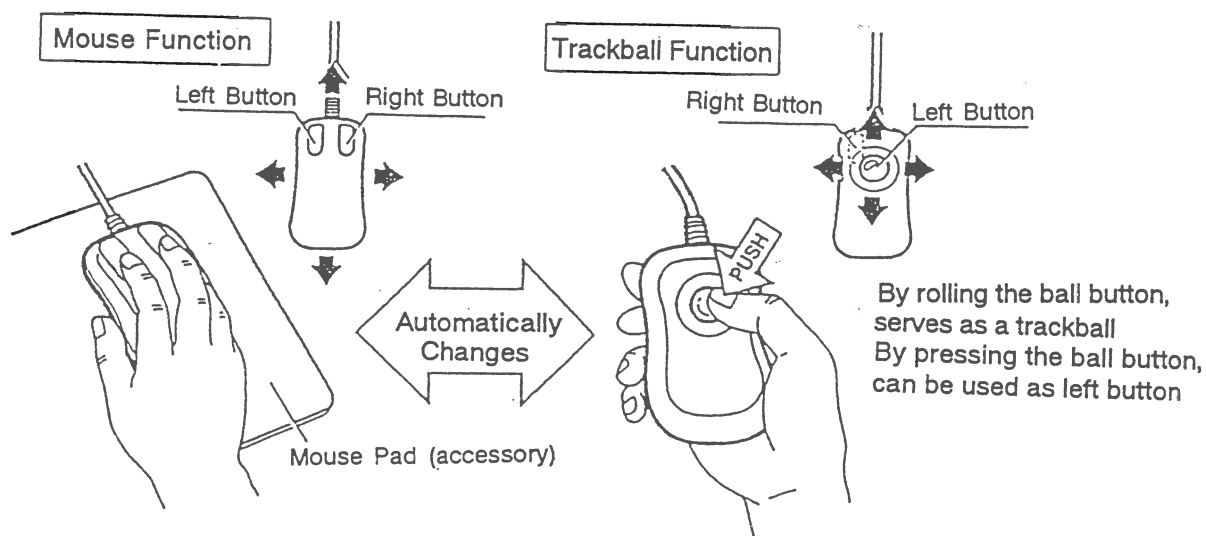

Turning over the body will automatically switch from mouse to trackball and vice versa

**SEGA™**